



4740 Beidler Rd  
Willoughby, Ohio 44094  
(440) 497 – 0250

## Introduction

This document is to provide basic operating instructions for Evilusions Basic Knock Box Prop.


## Setup

Set your prop wherever you like. Mounting it to a table or wall with appropriate screws or fastenings is preferred.

Plug in the provided low voltage power supply.

## Programming

Remove the bottom inside cover of the prop. This will reveal the electronics. Inside you will see a white circuit board with 2 leds and a push button. Hold down this button and knock in the pattern you want as an unlock code. The led will flash with each knock. When you let go of the button, the led should repeat your pattern back to you, and then blink several times very fast. This indicates programming is done and your prop is ready. Test the new code a few times before putting the cover back on.

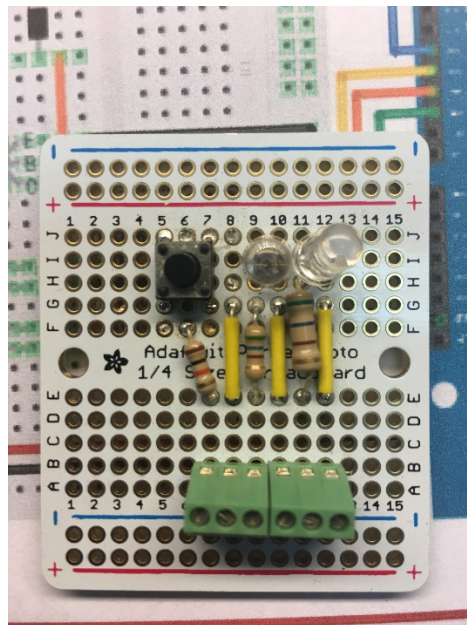

# EVILUSIONS BASIC KNOCK BOX PROP

ERPZ-146 V1.0



4740 Beidler Rd  
Willoughby, Ohio 44094  
(440) 497 – 0250

## Operation

When your patron knocks in the correct pattern, the mag lock will unlock revealing the hidden items or clue.

## Reset

The maglock will reengage after 10 seconds, then you can close the lid and it will relock.

## Specifications

Power source ..... one 12vdc 1000ma power supply

DISCLAIMER! Evilusions LLC is not to be held liable for injuries, death, or property damage caused by the improper use of or inability to use this product, misuse of this product for purposes that it is not intended or complete lack of common sense.

WARNING! This product is not designed to be used in a wet environment. If used outside, or in a damp environment all precautions should be made to prevent it from getting wet. Permanent damage to the product, persons, or property can occur. Any questions, comments or problems please feel free to contact us through e-mail at: [SALES@evilusions.com](mailto:SALES@evilusions.com)

Or call us at: 440-497-0250

# EVILUSIONS BASIC KNOCK BOX PROP

ERPZ-146 V1.0